

Zeno Reset Board Instructions

*NOTE: Do not insert or remove the tip while the board is powered up. Doing so may corrupt the memory in your Zeno tip. If for some reason this does occur you can send the tip to me for repair.

*The instructions are also printed on the back of the circuit board.

1. Plug your Zeno tip into the Zeno Reset Board. If you have a Zeno Mini tip, please make sure the sticker on the tip is lined up with the “45 Sticker” label on the board. Zeno mini tips plugged in backwards will not reset.
2. Attach a powered USB cable to the reset board. The board connection is a **USB mini**. A USB micro will not work.
3. Allow the tip to reset. The LED flashes while resetting and will illuminate solid once complete.
4. Remove the USB Cable.
5. Remove the tip and enjoy your freshly reset tip :)

Zeno Battery Replacement Service

If your Zeno is having trouble holding its charge it may be time to have the battery replaced. I offer this service for \$30, return shipping included. If you ever need this service shoot me an email.

Thank you for your purchase!